


OPERATING INSTRUCTIONS

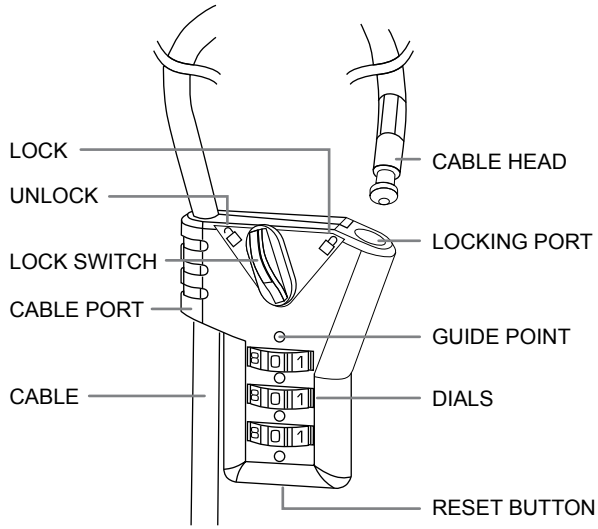

To Unlock

1. Turn the DIALS to the preset opening combination, 0-0-0, aligning the numbers with the GUIDE POINT.
2. Push the LOCK SWITCH to the UNLOCK position to release the CABLE HEAD.
3. Remove the CABLE from the lock body.

To Lock

1. Wrap the CABLE around a secure, non-moveable object, threading it and the lock body through the cable loop end.
2. Slide the CABLE through the CABLE PORT.
3. Now thread the CABLE through openings or brackets on the objects you want to secure and plug the CABLE HEAD onto the LOCKING PORT until it clicks into place.
4. You can tighten the CABLE around your gear by pulling it through the CABLE PORT.
5. Shift the LOCK SWITCH to the LOCK position. This locks the CABLE in place.
6. Scramble the DIALS randomly. Now, your gear is secured.

Note: You can scramble the dials only when the LOCK SWITCH is turned to the LOCK position.

Setting Your Own Combination

1. Turn the DIALS to the preset opening combination, 0-0-0, aligning the numbers with the GUIDE POINT.
2. Shift the LOCK SWITCH to the LOCK position.
3. Push in and rotate the RESET BUTTON 90 degrees clockwise with a small flat-head screwdriver or similar object.
4. Turn the DIALS to your own desired combination.
5. Rotate the RESET BUTTON 90 degrees counterclockwise back to its original position.
6. Your lock is now ready to open with its new combination. Keep your combination in a safe and accessible place for future reference.

NRS

nrsweb.com
f /nrsweb