

OPERATING AND MAINTENANCE INSTRUCTIONS

BATTERIES - For best performance, use alkaline AAA-cells. **IMPORTANT** - Remove batteries during long periods of storage. Remove exhausted batteries from light immediately.



BULB/L.E.D. REPLACEMENT - Use only Princeton Tec genuine replacement bulbs. To access the bulb, unscrew the cone and remove the reflector assembly. Pull bulb out and replace— see diagram. The L.E.D. is a diode and therefore requires proper polarity to function. If the unit fails to operate, rotate the reflector assembly 180°.

O-RING - Occasionally clean and lightly lubricate the O-ring and Lens Cap threads. Use only silicone grease, never use aerosol spray lubricants.

WARNING - All plastic components are made of high-impact resistant polycarbonate plastic. Certain forms of aerosol sprays can cause damage and void warranty.

MAINTENANCE - As with any outdoor equipment, the light should be kept clean with soap and water. Avoid getting dirt in the threads of the cone. If this should occur, take the light apart, remove the batteries and clean the light with soap and water, lubricate o-ring and reassemble the light.

NOTE - Some battery formulations can emit hydrogen gas. This gas can create an explosion potential in sealed devices, if it is not vented or removed. The platinum catalyst in this light will remove the gas.

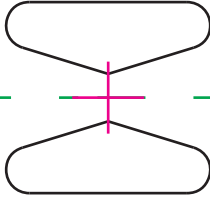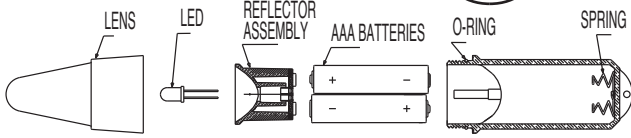

LIFETIME WARRANTY

FULL WARRANTY - Princeton Tec warrants this product to be free from defects in workmanship and materials under normal use for as long as you own this product. This warranty covers all of the component parts of the product except bulbs, harness and batteries. This warranty does not cover deterioration due to normal wear or damage due to misuse, alteration, negligence, accidents or unauthorized repair. Princeton Tec will repair or replace parts which are defective in workmanship or materials.

Your Authorized Princeton Tec Dealer and Princeton Tec are the only facilities authorized to repair the product. After (3) unsuccessful attempts to repair the product, you have the right to elect replacement of the product or a refund of the purchase price less allowance for use of the product. **NO INCIDENTAL OR CONSEQUENTIAL DAMAGES ARE INCLUDED IN THIS WARRANTY.** (Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Princeton Tec reserves the right to change product specifications without notice.

RETURN POLICY

If your light fails to operate, follow these simple steps:

- 1) Check batteries. Replace if necessary.
- 2) Contact Princeton Tec customer service at 800-257-9080 to request an RMA# in order to send your light for repair or replacement. No warranties will be accepted without an RMA#.
- 3) If the light continues to function improperly, return it without batteries to: Princeton Tec, 5198 Rt. 130 Bordentown, NJ 08505. Postage due and freight collect items will not be accepted



Princeton Tec
PO BOX 8057 TRENTON, NJ 08650
609-298-9331 609-298-9601 FAX
©2008 PRINCETON TEC